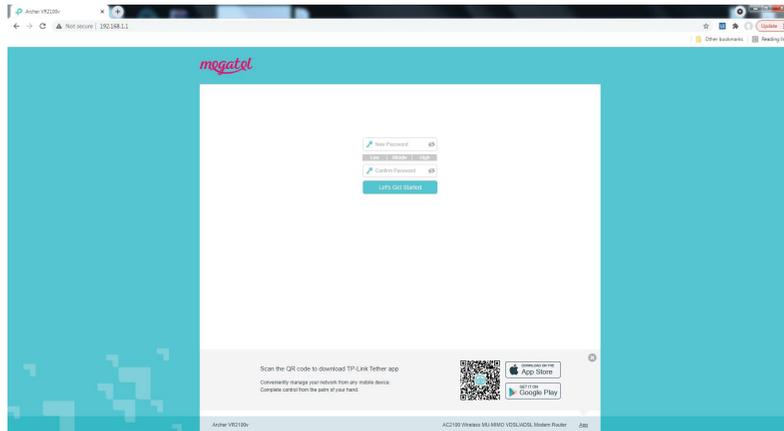## How to change service mode from UFB to DSL

1 Open your web browser and type the default **IP Address 192.168.1.1** in the address bar. The default password is **'admin'**. Type in **'admin'** for new password and confirm password, and click 'Let's Get Started'

2 Please go to **'Advanced'** -> **'Operation Mode'** and select 'DSL Modem Router Mode' then Save. The modem is automatically retarted and it takes 2-3 mins.
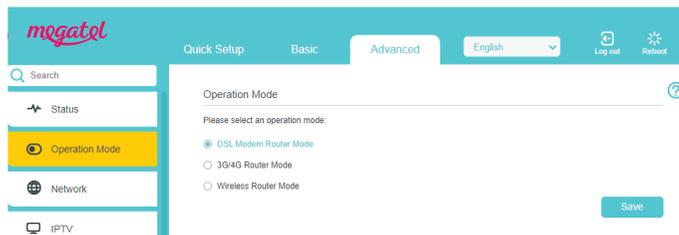
3 You will find a solid light on DSL and blinking / solid light on the Internet This means that your modem is connected to our network.

If your Broadband is still not working ...

Megatel Call Centre
Mon - Fri 9am to 6pm **Phone** 0800 634 283 **Email** faults@megatel.co.nz

Router Set-up Guide
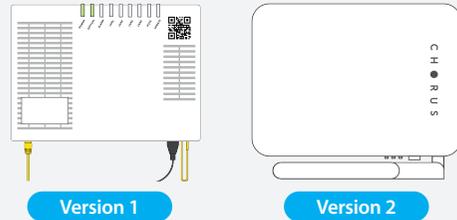
TPLINK Archer VR2100v

Your new router is already programmed, so all you have to do is simply connect the device to use your internet service.
This guide shows how to set up your router and the WiFi details.

megatel

How To Set Up Your Router

For UFB (Ultra Fast Broadband)

1 Locate the ONT box on the wall.

Version 1   Version 2

2 Confirm that ONT POWER & OPTICAL lights are on.

POWER OPTICAL ALARM LAN1 LAN2 LAN3 LAN4 POTS UPDATE
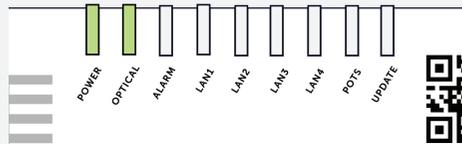
3 **A** Connect one end of a yellow ethernet cable into WAN port on the router.
B Connect the other end to GE1 & LAN4/WAN port on the ONT box.

GE1

LAN4/WAN

POTS1 POTS2 RESET GE1 GE3 GE3 GE4 POWER
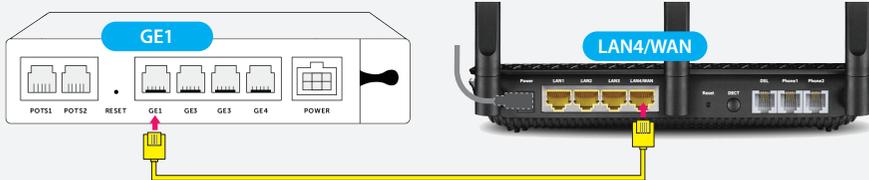
Bottom side of ONT box

Back side of wireless router

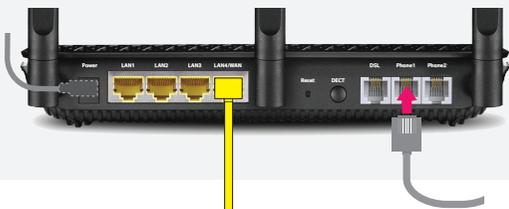**4** If you opted for the internet phone (VoIP), you will need to connect the phone cable into Phone 1 port on the router.

Power LAN1 LAN2 LAN3 LAN4/WAN   Reset DECT   DSL Phone1 Phone2

5 If your broadband is connected correctly, you will find a light on WAN 🖥 and blinking / solid on the Internet ⟳

For ADSL & VDSL

1 **A** Connect one end of RJ11 cable into the DSL port on your router.
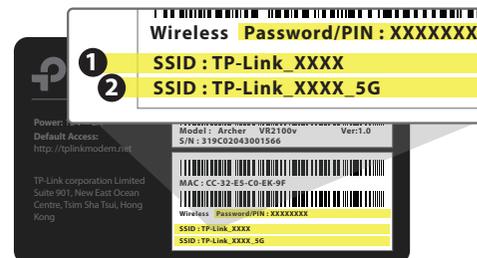**B** Connect the other end to the phone jack on the wall.

> If you opted for the internet phone (VoIP), you will need to connect the phone cable into Phone 1 port on the router.

Power LAN1 LAN2 LAN3 LAN4/WAN   Reset DECT DSL Phone1 Phone2

DSL Cable   Phone Cable

2 If your broadband is connected correctly, you will find a solid light on DSL 🖥 and blinking / solid light on the Internet ⟳

How To Connect To WiFi

Wireless **Password/PIN : XXXXXXXX**
❶ **SSID : TP-Link_XXXX**
❷ **SSID : TP-Link_XXXX_5G**

Power:
Default Access:
http://tplinkmodem.net

TP-Link corporation Limited
Suite 901, New East Ocean
Centre, Tsim Sha Tsui, Hong
Kong

Model : Archer VR2100v   Ver:1.0
S/N : 319C02043001566

MAC : CC-32-E5-C0-EK-9F

Wireless Password/PIN : XXXXXXXX

SSID : TP-Link_XXXX
SSID : TP-Link_XXXX_5G

You will be able to find SSID & WiFi Password/PIN on the back of your router.

❶ This SSID provides WiFi signal to a larger area with better stability. Please connect ❶ to your device with the Password/PIN, if you are connecting from a location far away from your router.

❷ This SSID provides faster WiFi speed to a shorter distance. Please connect ❷ to your device with the Password/PIN, if you are connecting from a location closer to your router.

** The WiFi option you select will depend on the size and setting of your home and the location where your router will be.