



How To Set Up Your Router

For UFB (Ultra Fast Broadband)


- 1** Locate the ONT box on the wall.

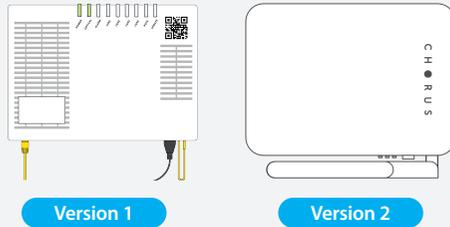


- 2** Confirm that ONT POWER & OPTICAL lights are on.

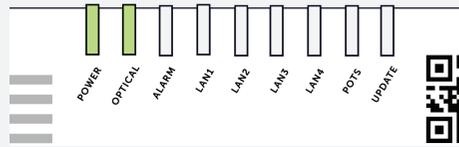

- 3** **A** Connect one end of a yellow ethernet cable into WAN port on the router.
B Connect the other end to GE1/LAN1 port on the ONT box.

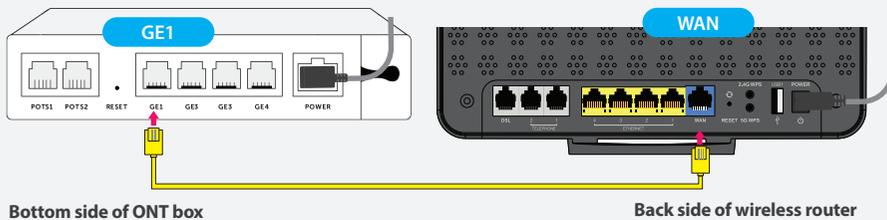

- 4** If you opted for the internet phone (VoIP), you will need to connect the phone cable into Phone 1 port on the router.

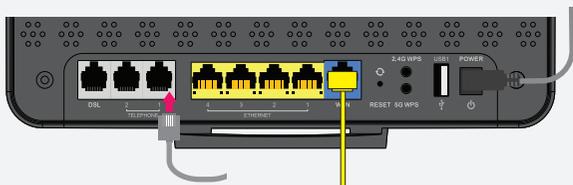


- 5** If your broadband is connected correctly, you will find a green light on WAN.




For ADSL & VDSL

- 1** **A** Connect one end of RJ11 cable into the DSL port on your router.
B Connect the other end to the phone jack on the wall.

If you opted for the internet phone (VoIP), you will need to connect the phone cable into Phone 1 port on the router.

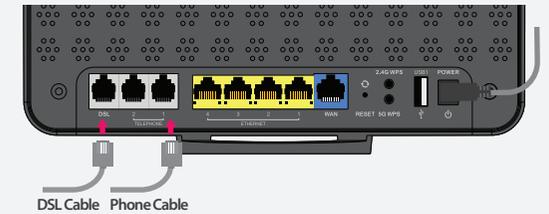

- 2** If your broadband is connected correctly, you will see a solid green light on DSL and blinking green light on Internet.



How To Connect To WiFi

Enhanced Hybrid LTE Gateway Admin IP Address: 192.168.20.1
Model No: NLI1901ACV
Part Code: NLI1901ACV-01-01
IMEI: XXXXXXXXXXXXXXXX
MAC: XXXXXXXXXXXXXXXX
Serial No: 944525YYWWNNNNN
Power: 12V 2A
 R-NZ
 Made in China. **NetComm**

Default username/password: admin/944525YYWWNNNN
WiFi Network Name: XXXXXXXX.XXXX
WiFi Password: XXXXXXXXXX

TELEPERMIT
 Telepermit Holder:
 NetComm Wireless NZ Ltd
 Product: Enhanced Hybrid
 LTE Gateway
 PTC ### / ## / ###


XXXXXX admin/944525YYWWNNNN
WiFi Network Name: XXXXXXXX.XXXX
WiFi Password: XXXXXXXXXX

You will be able to find SSID & WiFi Password/PIN on the back of your router.

The default settings of the router have the wireless function enabled so there is no configuration necessary to use the wireless function. Simply connect to the SSID listed on the WiFi security card or on the label located on the back of your router.

How To Connect To Mobile Broadband

- 1 Ensure that Cellular antenna is attached correctly.
- 2 Ensure that SIM card is Active and inserted correctly.

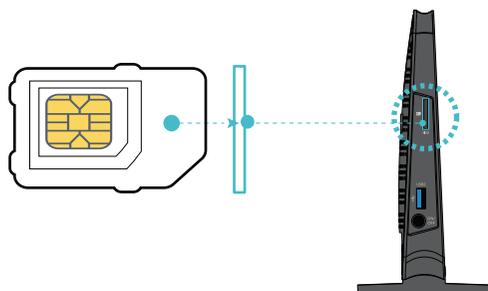

- 3 Manually set up Mobile Broadband connection.

The following steps will take you through the process of setting up your Mobile Broadband connection.

- Open a web browser (such as Internet Explorer, Google Chrome or Firefox).
- Type <http://192.168.20.1> into the address bar and press Enter.
- At the login screen:
 - Type **admin** into the Username field and **the router serial number** into the Password field
- Click the Log In button
- Navigate to Advance setup > Mobile Broadband
- Click Edit, and manually select 3G or LTE option from the dropdown list.
- Click Apply/Save button and Reboot.

- 4 On Successful connection, your Internet and LTE LED will be lit, and the corresponding LTE Signals LEDs will indicate signal strength.



If your Broadband is still not working ...

Please contact us at,

Megatel Call Center 0800 634 283

General & Account Enquiries Mon to Fri 9AM - 6PM **Faults and Emergencies** 24 hours, 7 days a week

Live chat via www.megatel.co.nz or MyMegatel App Mon to Fri 9AM - 5PM